
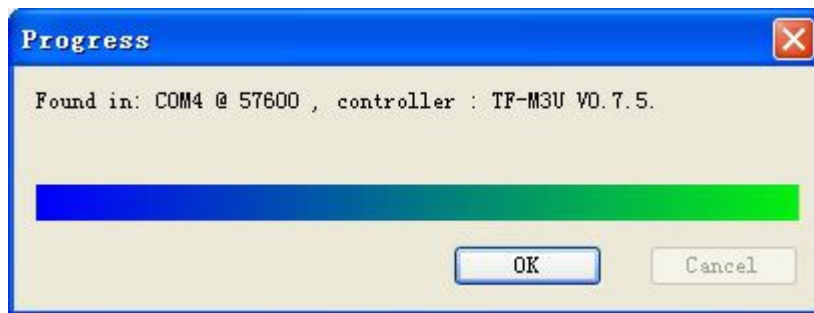


Serial card use steps

1、 After Connect control card correctly according to [Serial card connection](#)

[diagram.html](#), then through 5V DC. Open software  PowerLed ,click check

screen  , a dialog box appears:



It shows that the communication between control card and computer is o

2、 Need to set up parameters if the parameters are not correct.

3、 If the screen can display normally,you can add"text" "time" and so on ,Regulate parameters

At last, click  Send, sending is ok, As shown below

