U-disk control card setting steps

Ĭ

1、After install the software, double click ^{PowerLed} .U-disk control card could

edit content without cable that connected through serial port(RS232) and Lanport, so no need click"search" in the software.

et	
	2, 19, 9 *
File(F) Edit(E) Tools(T) Op	
Sear Prog Text Clk Tim	e Medi Anim Tab Tmpr Coun Wnd Del Sync Turn Brig Exp Send
Faneli Frogrami Texti 11-5 Timel	Preview 4-11-12 Welcome to L + - FV (-> P 1 of 2
Options	Effect Options 🛛 Tahoma 🗸 24 🗸 📕 Red 🗸 🖬 Blac 🗸
Name: Text1	Act: Continuous mov.♥ □ 2 B / U = ± = □ ↓ ↓ ↓
X: 64 🗘 W: 192 📚	Welcome to use
Ү: О 🗢 Н: 32 🌩	Hold: 1 Sec
Edge: Non 💙 Act: Anti 🗸	Clear: None
Spd: 3 Color: Rane	
	Disconnected

2. In the edit interface, and add the program, text, time

At last,Click the right top of the software

Export To USB Disk		×
DIR:	-Prompt ch	oroctore
I:\ [125MB FAT] - Options Sync timer, adjust adjust the time 20 Sec ticked hook! Include Wi-Fi parameters Include panel parameters	USB 20% OK! E004 E007 E008 E009	E100 E101 E102 E103 E110 E111 E112
Detected USB disk.	<u>E015</u> E016	<u>DHCP</u> <u>SLP</u>